


Step 1. Slide spreader spar into metal o-ring, placing the o-ring in the center next to the T-fitting. Then slide both ends into the pockets on the wing tips.

Step 2. Slide the king post (indicated in red) up through the seam in sail pocket and insert it into the T-fitting.

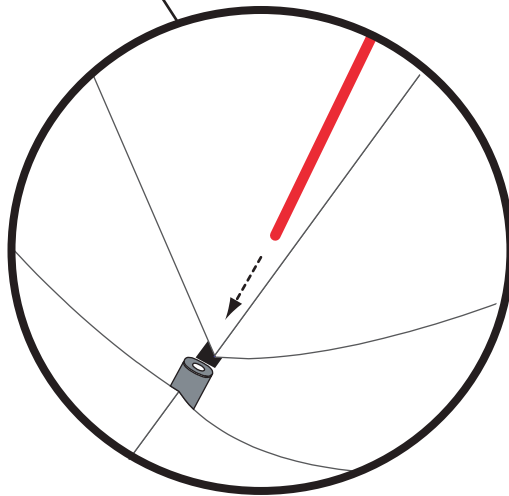

Step 3. Insert the opposite end of the king post into the fitting located directly below the T-fitting.