


## Directions

1. Insert the spreaders that are already sleeved in the seam into the fitting on the spine.
2. Next, insert short spar under the spine and into the pockets located on either side of the head.
3. Locate the 1/2 inch section of unsewn seam on each side of the tail fin. Insert the long, flexible fiberglass spar into the seam opening and push to bottom. Repeat for other side.
4. Attach flying line to bridle loop.

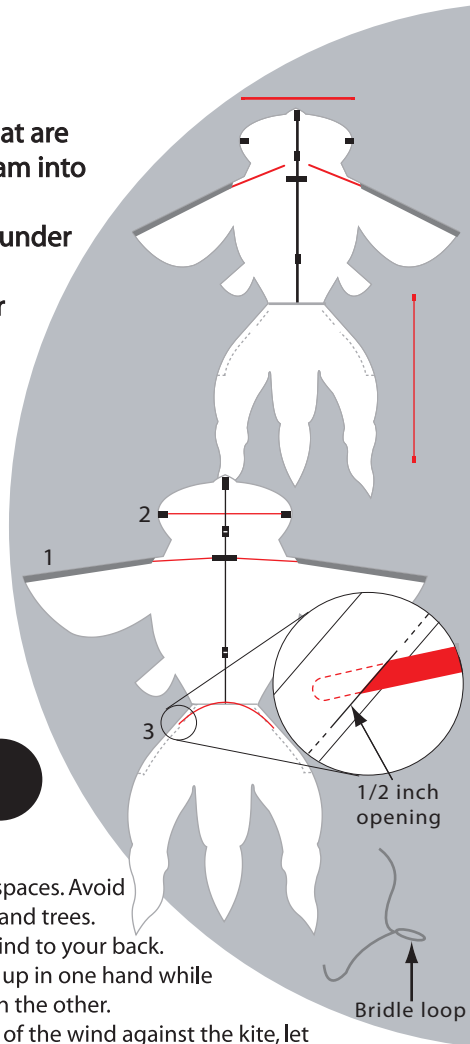

## Tips & Tricks!

1. Kites fly best in wide open spaces. Avoid flying in areas near buildings and trees.
2. To launch, stand with the wind to your back.
3. Hold the kite with the nose up in one hand while securely holding the winder in the other.
4. When you feel the pressure of the wind against the kite, let go. As the kite rises, slowly release the line.
5. A high altitude launch is an effective method of getting your kite off the ground in light winds. Have someone stand downwind as you let out as much line as possible (>100 feet). As the kite is released into the wind, tug on the line.