




Slide the two Leading Edge Spars together, inserting the lower spar into the ferrule attached to the upper spar.

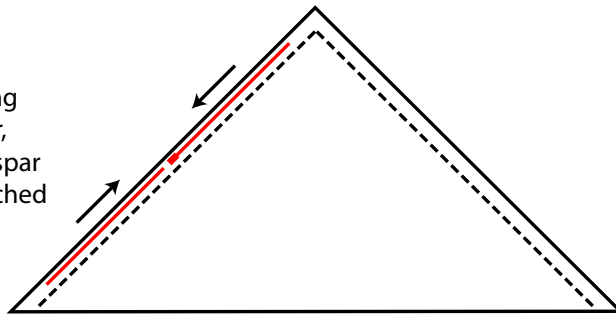


Slide the Leading Edge Spar down the sleeve away from the nose, to the bottom of the wing (trailing edge).

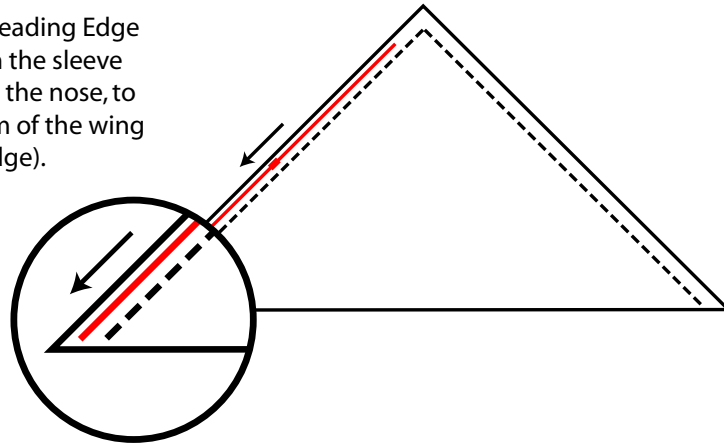

Slide the two Spine Spars together, inserting the lower spar into the ferrule attached to the upper spar.

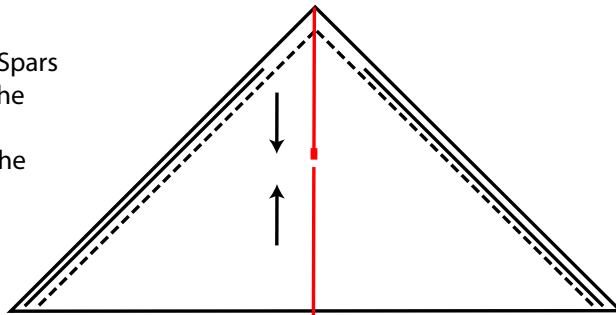

Slide the Spine Spar into the bottom pocket.

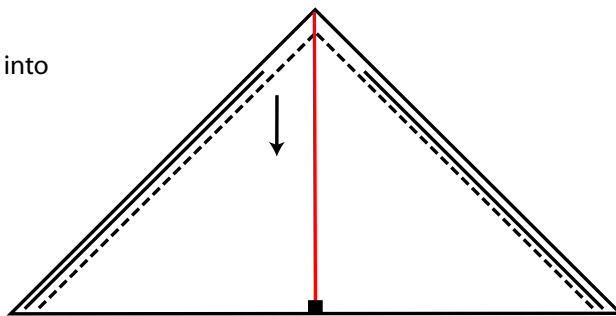

Insert the spreader into the reinforced pockets on the back side of the kite.

