



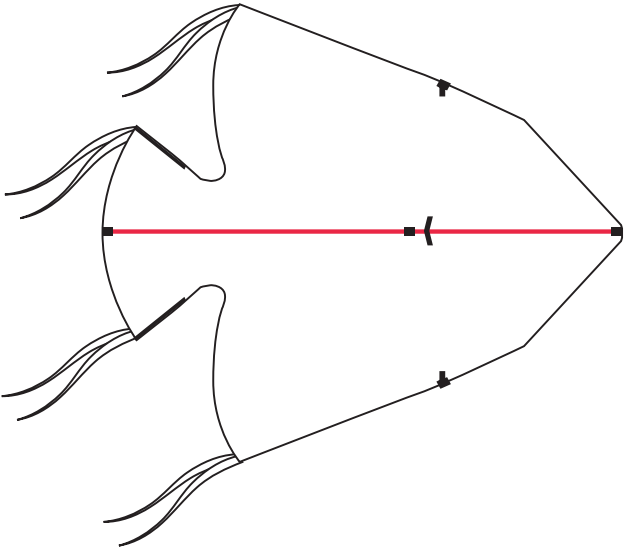


1. Unroll the kite and place face down on a flat surface. Check that the spine is securely inserted into its pockets.

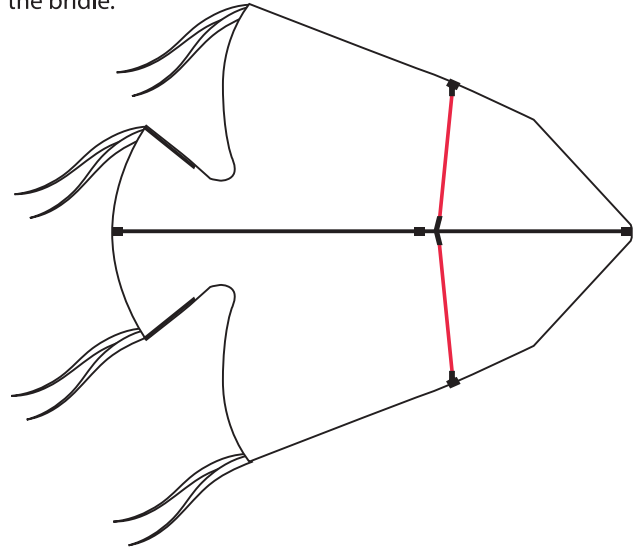

2. Insert a spar into the center dihedral connector and the outer connector. Repeat for the other side. Make sure that the dihedral is turned so the wings on the kite are swept away from the bridle.



3. Gently bend the tail spar and insert into the tail pockets.

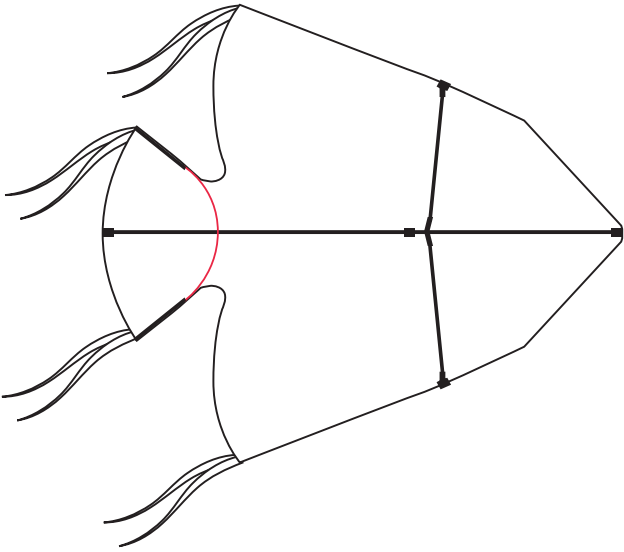

4. Attach line to bridle and fly!

